




INSTRUCTIONS FOR USE Cartridge alignment tool

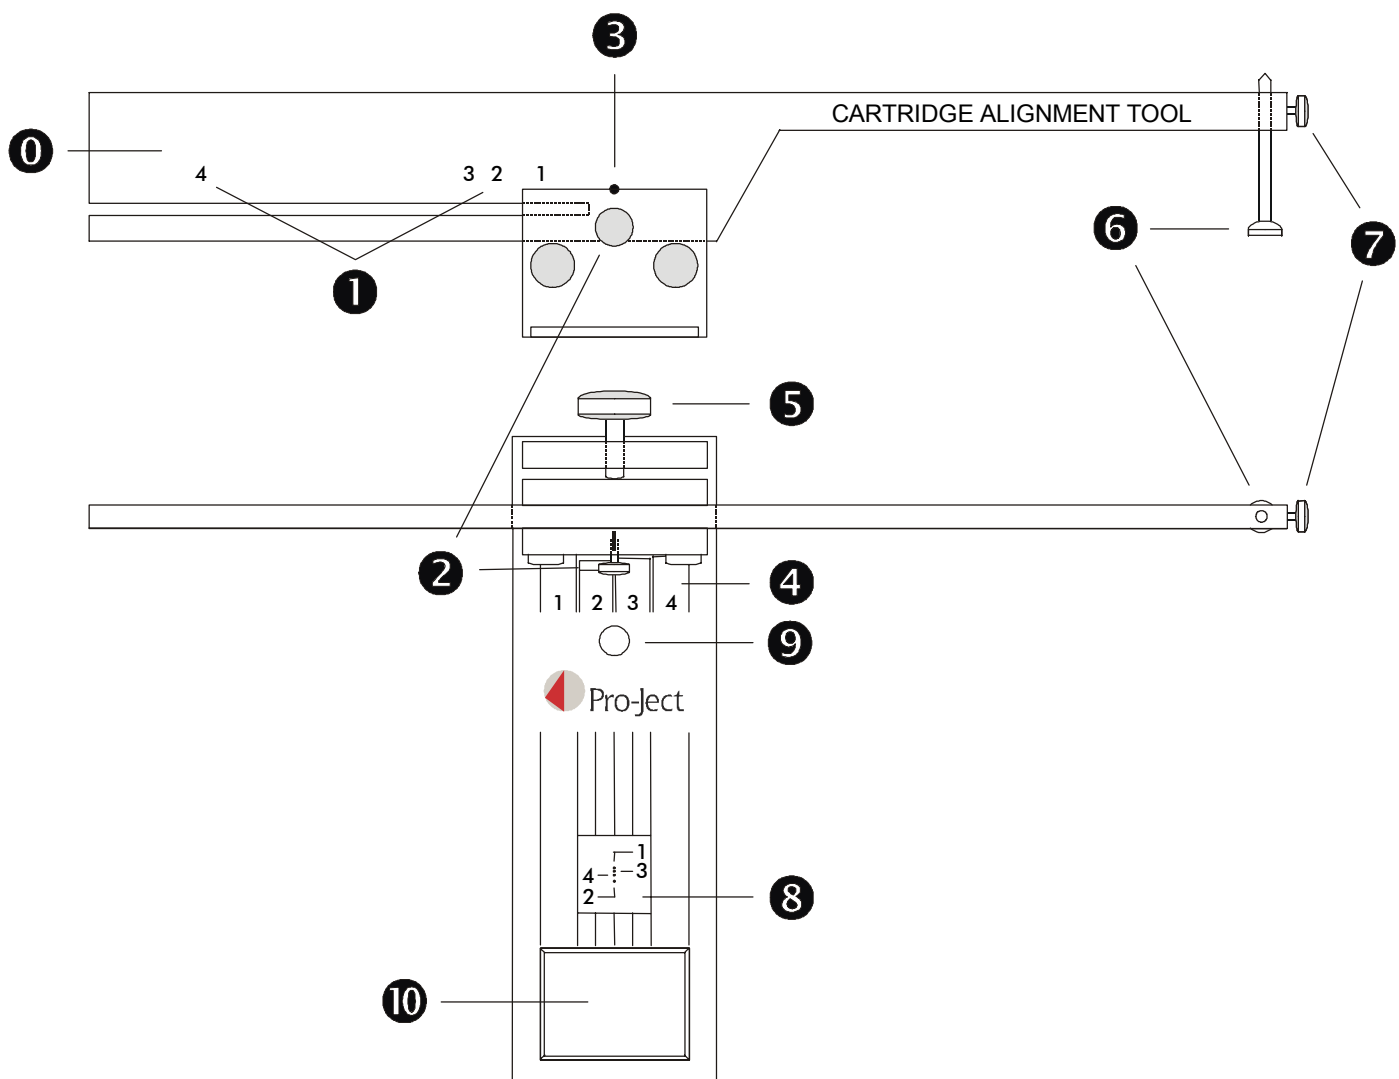

- ① Beam
- ① Toner arm type marks
- ② Beam fixing screw
- ③ Beam adjustment mark
- ④ Scale
- ⑤ Adjustment screw
- ⑥ Rod
- ⑦ Rod fixing screw
- ⑧ Overhang marks
- ⑨ Base with spindle hole
- ⑩ Mirror

Assembly

Slide the beam ① into the groove in the base ⑨ from the right (see diagramme). Make sure that the beam fixing screw ② is loosened far enough to allow the beam to move easily.

Using the tool

Loosen the rod's fixing screw ⑦ and remove the rod ⑥ from the beam. Place the tool on the turntable platter so that the hole in the base ⑨ fits over the record spindle. Re-fit the rod ⑥ in the beam ①.

By sliding the beam ① to and fro adjust the cup on the end of the rod ⑥ until it covers the tonearm's upper bearing.

After making sure that the base ⑨ is flat on the platter, fix the rod's ⑥ and beam's ① position by tightening the fixing screws ⑦ and ②.



By reversing the rod so that the pointed end is downward the tool may be used to establish the vertical axis of other manufacturer's tonearms.

Adjusting for tonearm length

Make sure that the beam adjustment mark ⑤ lines up with the tonearm type marks ① on the beam. Now adjust the beam and its guide using the adjustment screw ⑤ until its edge aligns with the uppermost line of the scale ④.

Adjust the scale ④ to the mark given in the following table appropriate to the Pro-Ject turntable type:

- 1 For **0.5, Debut, Debut/Phono, Debut/Phono SB, 1 Xpression, 1.2, 1.2 E** and **1.2 Comfort** and models equipped with an 8,6" (218,5mm) tonearm
- 2 For **6.1, 2 Xperience, 2.9 Wood/Classic, 6.9, Perspective, RPM 4, RPM 6, RPM 6 SB, RPM 9, RPM 9 Classic, RPM 9 Acryl** and **Studie** models equipped with a 9" (230mm) tonearm
- 3 For model **2** equipped with a 9.35" (237mm) tonearm
- 4 For model **Studie** equipped with a 12" (305mm) tonearm

Cartridge alignment

Mount the cartridge under the headshell. Tighten the screws only enough to just fix the cartridge. Now adjust the downforce approximately to the manufacturer's recommendation. Check the tonearm height adjustment and adjust if necessary. Both tasks are described in the instructions supplied with your Pro-Ject record player. Adjust the cartridge fore and aft using the elongated holes in the headshell so that the needle rests on the correct overhang mark ③ for the tonearm type (1 – 4) when the arm is lowered.

Now align the front edge of the cartridge to make it parallel to the lines which run the length of the base. This adjustment is easier to perform if a thin propelling pencil lead is attached with sticky tape to the front of the cartridge (provided that this has a flat front edge). Please remember to fasten the cartridge mounting bolts tightly after completing adjustment. Check the adjustment again after tightening the bolts.

Adjusting azimuth

Loosen the grub screw which fixes the tonearm tube in position as explained in the instructions for use accompanying your Pro-Ject record player. Lower the arm with the lift so that the needle comes to rest in the middle of the tool's mirror ⑩. Now revolve the tonearm until the needle is perpendicular to the mirror's surface or until the cartridge's bottom edge is parallel to it. Re-tighten the grub screw. Re-check all adjustments and repeat the procedures if necessary.

PRO-JECT is a Registered Trademark of H. Lichtenegger.
This guide was produced by: ATR-Audio Trade GmbH
Copyright © 2002
Audio Tuning. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.