



INSTRUCTIONS FOR USE
Pro-Ject Phono Box MM

Dear music lover,

thank you for purchasing a PRO-JECT AUDIO phono amplifier.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



Warning of a hazard for the user, the unit or possible misuse.

 



Important notice.

Connecting the record player (MM-cartridges only)

Connect the tonearm signal lead to the **INPUT** of the phono amplifier.

Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white. The earthing wire of the tonearm lead should be connected to the earth terminal.

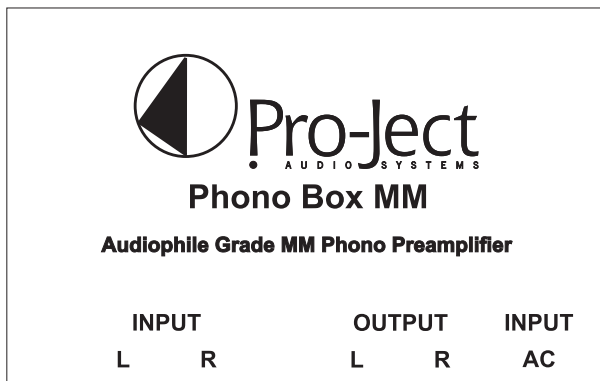

Connection to the amplifier

Connect the **OUTPUT** of the phono amplifier to a line input (such as **AUX, CD, Tuner, Tape** or **Video**) on your amplifier.

Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.



Make all connections whilst the phono amplifier is disconnected from the power supply.

*Do not connect the phono amplifiers output to a phono input (sometimes labelled **gram, disc** or **RIAA**) on the amplifier.*

Mains power connection

The phono amplifier is supplied with a power supply suitable for your country's mains supply. Check the label before connecting to ensure compliance with the mains rating in your house. Connect the low voltage plug from the power supply to the **Power ~16V** socket of the phono amplifier before connecting the power supply to the mains.

Technical specifications Pro-Ject Phono Box MM

Input impedance:	47kohms/100pF
Gain:	32dB
Output voltage typically:	200mV/1kHz at 5mV/1kHz
Noise floor:	82dB (88dB - A weighted)
THD:	<0,05%
RIAA-equalisation curve accuracy:	20Hz - 20kHz / max. 0,5dB
Input:	1 pair RCA/Phono sockets
Line-level output:	1 pair RCA/Phono sockets
Outboard power supply:	16V/200mA AC, suitable for your country's mains supply
Power consumption:	16V/40mA AC
Dimension W x H x D:	105 x 30 x 75mm
Weight:	280g without power supply

Potential incorrect use and fault conditions

No signal on one or both channels:

No connection between player and phono amplifier ore amplifier. This could be due to a faulty plug, broken wire or solder joint or simply loose plug/socket connection.

Strong hum:

No earth connection from cartridge or arm or arm cable to phono amplifier, or earth loop.

Service

Should you encounter a problem which you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH
Copyright © 2007. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.