



INSTRUCTIONS FOR USE
Pro-Ject Stereo Box

Dear music lover,

thank you for purchasing a PRO-JECT AUDIO amplifier.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.




Warning of a hazard for the user, the unit or possible misuse.



Important notice.

Connectors

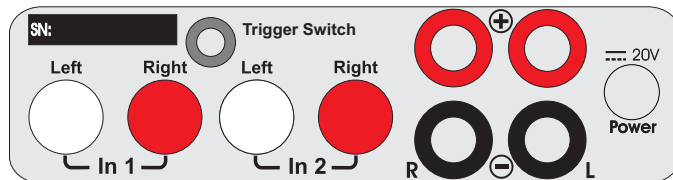

Make all connections whilst the amplifier is disconnected from the power supply.



Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.

Inputs

Line level sources such as CD player radio or TV can be connected to the input sockets marked **In 1** & **In 2**.

Connection to the speakers

The output terminals accept loudspeaker cables terminated with 4mm Ø Banana plugs, spades connectors or naked wire.



Only connect one loudspeaker with an impedance not less than 4 Ohm per channel.

Make sure the polarity of the connection is correct at each end of the cables. The red terminals carry the positive signal (+), the black connections the negative signal (-).

Remote switching

Optional Pro-Ject Switch Box. The **Trigger Switch** socket connects the input expander Pro-Ject Switch Box. The Switch Box provides four extra line-level inputs.

A 30cm remote switching cable is supplied with the Pro-Ject Switch Box for connecting the **Trigger Switch** socket of the Pro-Ject Stereo Box.

Do not use this socket for any other connections for which it is not designed.

Mains power connection

The unit is supplied with a power supply suitable for your country's mains supply. Check the label before connecting to ensure compliance with the mains rating in your house. Connect the low voltage plug from the power supply to the **Power 20V** socket before connecting the power supply to the mains.

Using the Pro-Ject Stereo Box



Stand-By

The switch marked **Power** (press and hold to switch into standby mode) on the front panel and **ON/OFF** button on the remote control turn the unit on or back into standby. The blue LED on the front panel shows that the unit is powered on.

Input selector


After the unit is powered on, pressing the **Power** button selects the **In 1** and **In 2** inputs in turn. Select the inputs using the remote control buttons marked **CH-** or **CH+**. If Input **1** is selected, the LED over the **Input Select** button lights up green. If Input **2** is selected, it lights up red.

If the optional input expander Pro-Ject Switch Box is connected, **Input Select** will also select the additional inputs provided by the Switch Box.

Volume

Adjust the volume to the desired level using the large knob marked **Volume** on the front panel or by using the buttons on the remote control marked **VOL-** or **VOL+**.

Remote control Pro-Ject Stereo Box

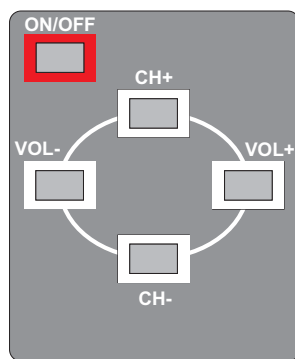

ON/OFF switches the unit into and back out of the standby mode

VOL- and **VOL+** adjusts the sound volume

CH- and **CH+** selects the inputs

Changing batteries

Proceed as follows:

- Slide open the battery case cover
- Replace both batteries together. Make sure the batteries are the right way round
- Refit the battery case cover

Battery type: 2 x AAA 1,5V mignon cells



Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.

Technical specifications Pro-Ject Stereo Box

Power output:	2 x 20W/30W at 8ohms/4ohms (both channels driven)
Frequency response:	20Hz - 20kHz (+ - 0,2 dB)
Channel separation:	> 40dB at 20kHz
Noise floor:	> -100dB (A weighted)
THD:	< 0,05% at 10W
Gain:	22dB
Line-level inputs:	2 pairs RCA/Phono sockets
Input impedance:	20kohms
Trigger Switch:	3-pole 2,5mm co-axial jack
Outboard power supply:	20V/3A DC (peak 7A DC), suitable for your country's mains supply
Power consumption:	20V/3A DC
Replacement battery remote control:	2 x AAA / 1,5V
Dimensions (W x H x D):	103 x 38 x 141mm
Weight:	720g without power supply

Service

Should you encounter a problem which you are not able to alleviate or identify, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH
Copyright © 2008. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.